 
 
 
 

 


 



 
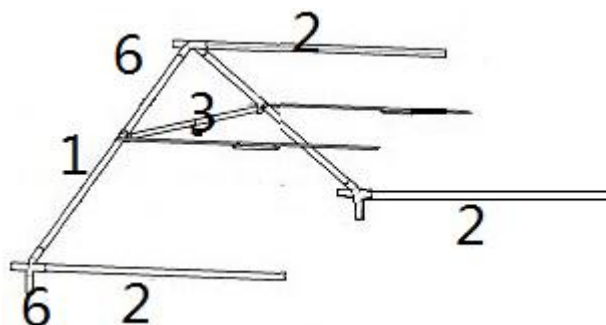



4x 2 EXPANSION KIT

1.	Frame Pole		2
2.	Frame Pole		5
5.	Connection		1
4.	Support Pole		2
6.	4 way Connector		3
8.	Ground middle connector		2
11.	Pipe holder of connection No.5		2
14.	6x180mm Peg		2
15.	4x180mm Peg		6
16.	Long bungee ball		32
18.	Screw M6X30MM with wing nut		2
19.	Finger screw		18
21.	Turn buckle		2
22.	Steel wire(use together with turn buckle)		4
23.	roof		1
24.	Sidewalls		2

1.
 Select an area of flat ground for the tent. Unpack the carton and check all parts including tubes, tent and accessories... etc. are present. Assemble the roof top framework by joining the (7,9) Connectors together with poles (1,2,5). Ensure the tension screw is fixed to every pole tightly. Use the turn buckle and steel wire to tighten the frame. Before you put all on, do not tighten them.



4x 2 EXPANSION KIT

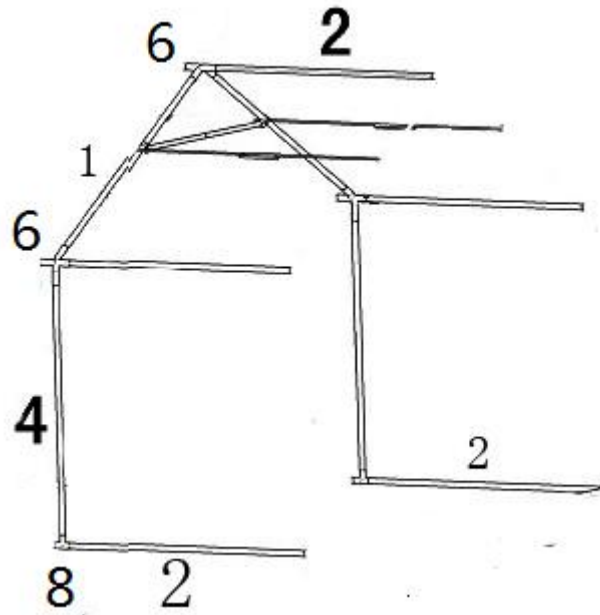

2. cover the roof on the top frame, and sidewall and endwall like 4X4M basic section. Add more expansion section to make your tent more bigger.