


7X15M PVC PART LIST


(1) Galvanized Pipe

Quantity 32



(2) Galvanized Pipe(with a hole)

Quantity 35




(3) Galvanized Pipe

Quantity 16




(4) Galvanized Pipe

Quantity 16



(5) Galvanized Pipe

Quantity 8




(6) 110° 3 Way joints

Quantity 4




(7) 110° 4 Way joints

Quantity 12




(8) 140° 3 Way joint

Quantity 2




(9) 140° 4 Way joints

Quantity 6




(11) 3 Way joints

Quantity 4




(10) Cross 4 Way joints

Quantity 12

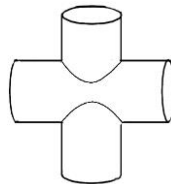


(17) foot

Quantity 16




(21) Top Cover

Quantity 1

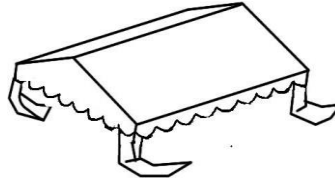


(22) Side Panels

Quantity 14



(23) Door Panels


Quantity 2



7X15M S STRUCTURE TENT INSTRUCTION

FRAME ASSEMBLY


1. Place all joints, leg pipes and window pipes and connection pipe on the ground as shown. Push two pipes into the joints, use screws fix them.

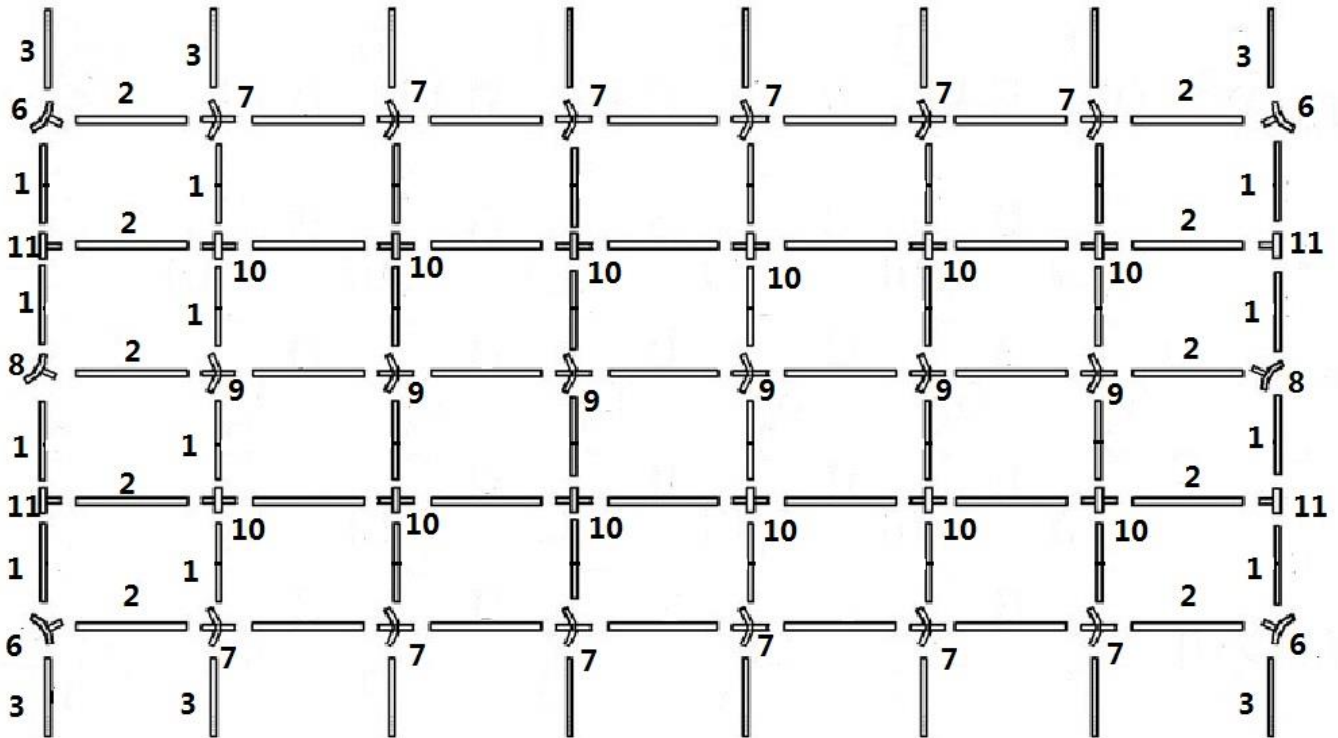

7X15M S STRUCTURE TENT INSTRUCTION

FRAME ASSEMBLY

2. Connect pipes together starting with the center frame. Then assemble each side

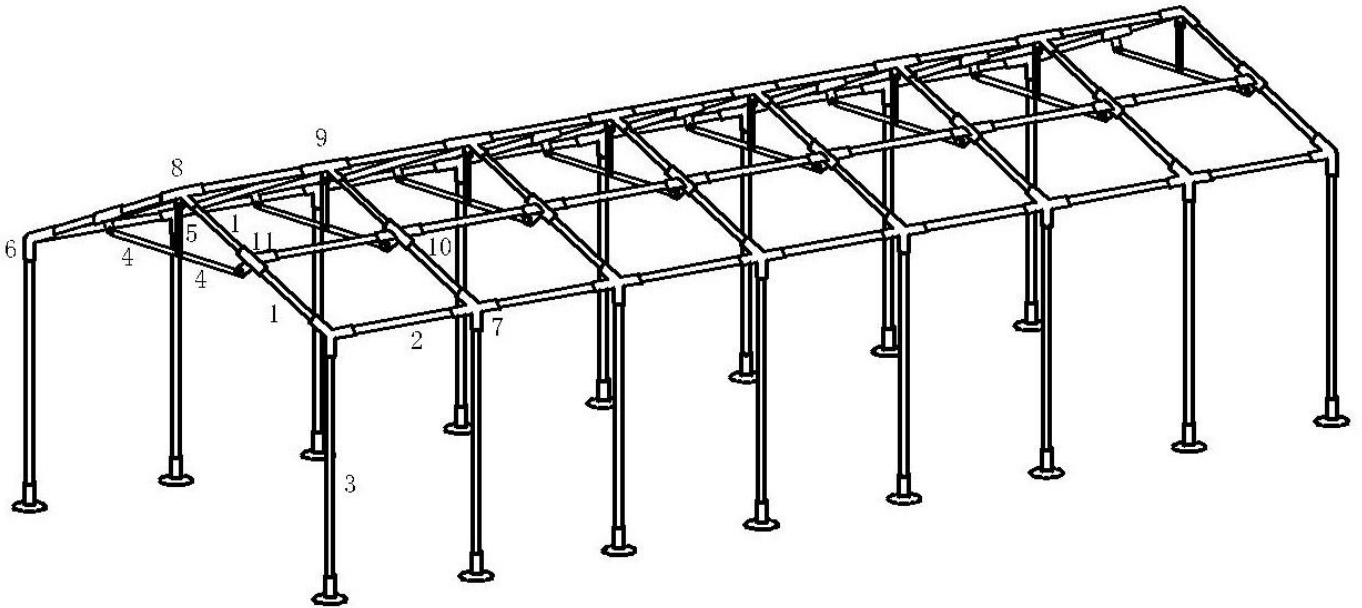

ATTACHING COVER TO FRAME


1. Start by lifting one of the frame and inserting legs.

2. Drape cover over frame.


3. Next, lift the other side of the frame and insert remaining legs.

4. Hung up the all side panels and door panels.

NOTE: Loosen the straps on the bottom of the legs when attach the cover. Adjust as needed after the canopy is assembled.

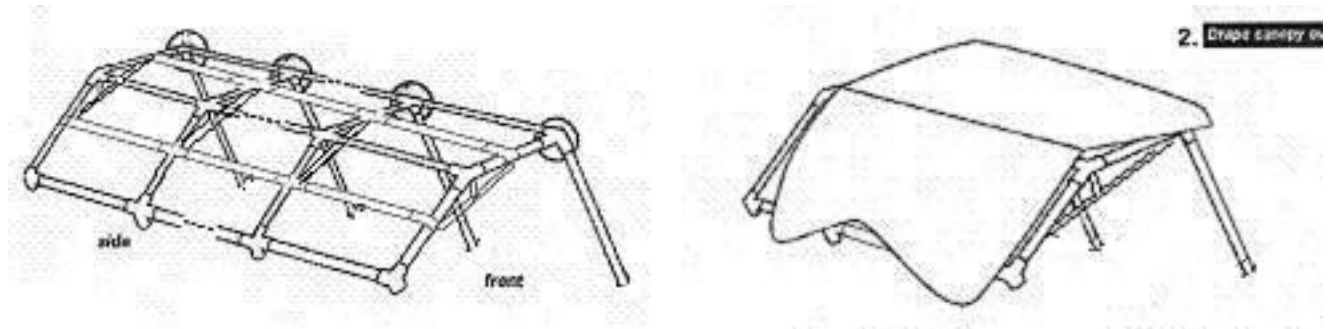

Insert the remaining legs and finish attaching cover to frame. Then hung up the all side panels and set up the foot and the ground bar.

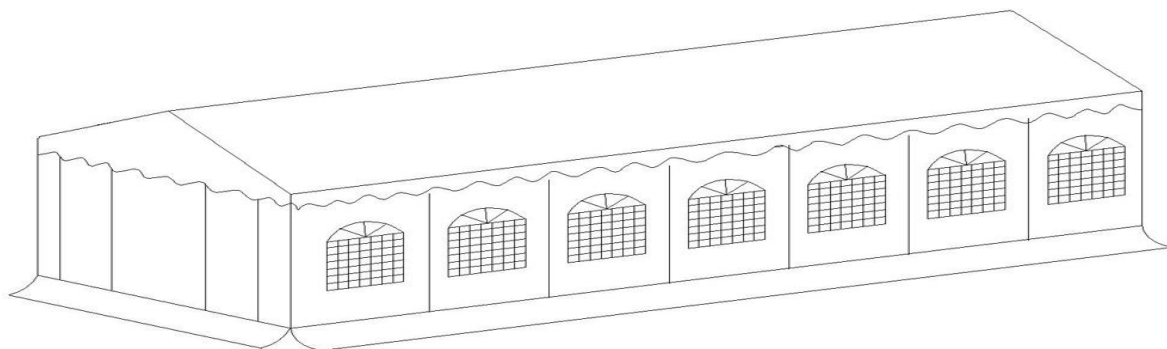

NOTE: USING TIR DOWNS OR PROPER ANCHOR KIT FOR YOUR NEEDS.