
Item Qty.	<u>Description</u>	<u>Item</u>		***************************************
1 1	***	A.A.A.A.A.	Qty.	Description
2 4	Backboard Expansile tube	5	1	Net
3 4 4 1	Self-drill bolt Rim			
	HARDWARE ID	ENTIFIER		
		SALA FORES		
1	2			3

1. Drill four holes on the wall according to the hole distance on the backboard. Put 4 pcs expansile tube inside them

Fix the rim & backboard by self-drill(3) bolt on the wall as shown.

Tighten all the bolts by spanner,make sure the whole backboard system is installed on the wall firmly.

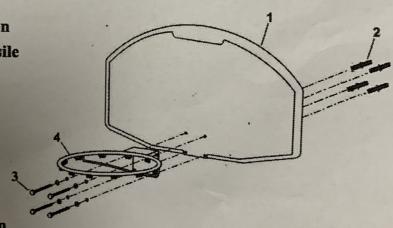

2. Install net (5).

